

TECHNICAL BULLETIN

BULLETIN : TB-24-01 (2 pages) - April 15, 2024

SYSTEM : Spray Heads

AFFECTED TANKS: All with Spray Heads

REASON : For technicians installing replacement or new spray heads, all need the actuator adjusted and set before installation

COMPLETION : Upon installing new or replacement spray heads.

Tools required:

- Tape measure
- 1 ¼" wrench
- 11/16" wrench
- 5/8" wrench

Use a 1 ¼" wrench to unscrew actuator from spray head housing.

Use a tape measure/steel ruler and measure from top of diaphragm to top of spray head housing (around 3 5/8").



Measure actuator from the base to the end of the adjuster bolt.

(Measurement should be 1/16" to 1/8" longer than the housing measurement.)

Using a 11/16" wrench break the jam nut loose

TECHNICAL BULLETIN

Using a 5/8" wrench screw/unscrew adjuster bolt.

Once bolt is set using a 11/16" wrench tighten jam nut.



Using 1 1/4" wrench install actuator to spray head housing.

For more information, email sprayking@holtmfg.com.

